

Multi Photo and Business Card Feeder Setup Guide


4051186-00 XXX

1 Set Up Your Scanner

First open the box containing the Epson® Perfection® 2480 Photo scanner and set it up following the instructions on its *Start Here* sheet. Be sure to install all the software from the scanner CD-ROM as instructed.

2 Unpack the Feeder


- 1 Make sure you have all the parts shown below:

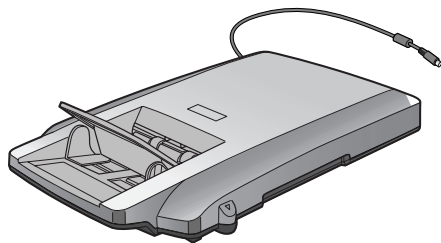

Multi Photo and Business Card Feeder



Spare paper path guide
(see your scanner
Reference Guide for
instructions on using this)

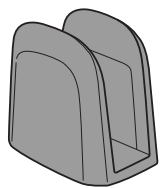

Stand for feeder
(when not in use)


- 2 Remove all the packing tape from the parts.

3 Install the Feeder


- 1 Turn off your scanner by unplugging it from its power cord.

Note: Make sure you unlocked the transportation lock on your scanner. See the *Start Here* sheet that came with your scanner for instructions.


- 2 Disconnect the cover cable from the scanner.

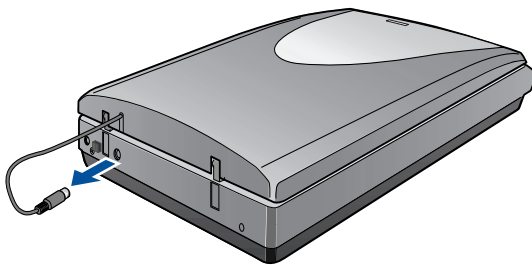


- 3 Open the scanner cover.

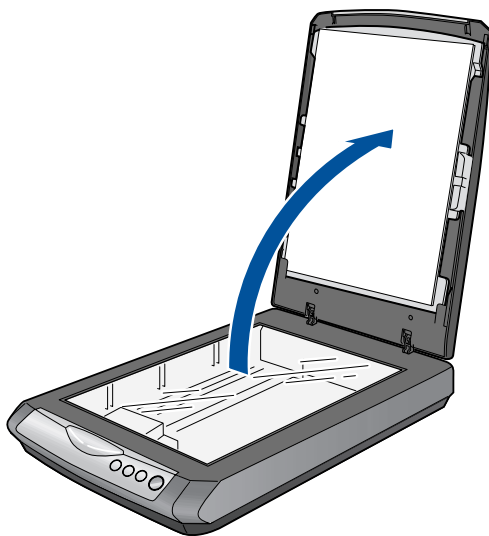


- 4 Pull the scanner cover straight up to remove it.

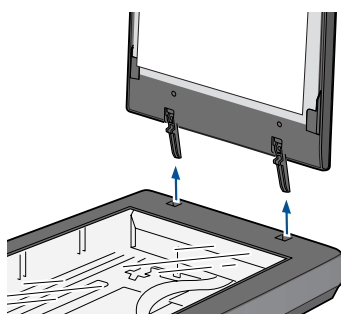


- 5** Place the Multi Photo and Business Card Feeder on the scanner and fit the tabs on its sides into the semicircles on the sides of the document table.

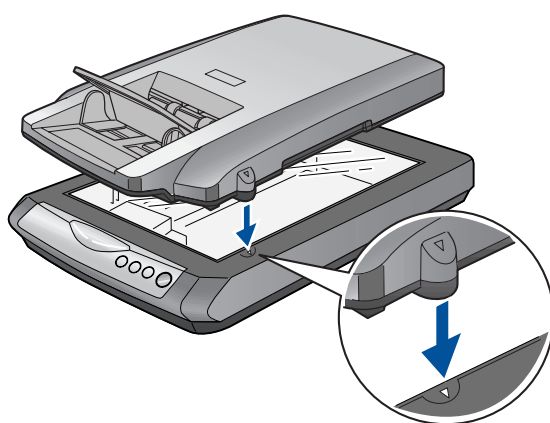

- 6** Connect the feeder cable to the scanner's **Option** port.

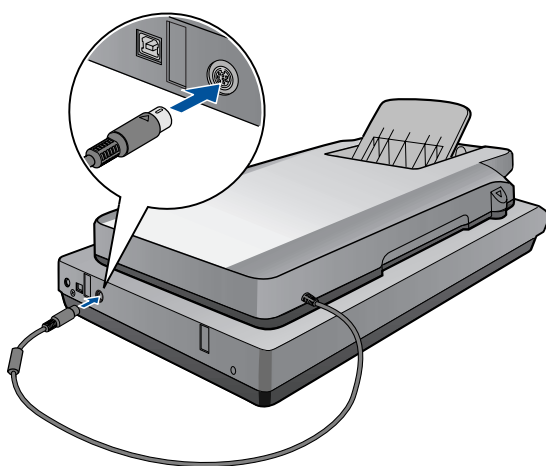

- 7** Plug in the scanner's power cord. The scanner turns on and the  Start light flashes green. It stops flashing and stays on green when the scanner is ready.

4 Load Cards or Photos


Before loading business cards or photos in the feeder, make sure they meet these requirements:

- Their width is from 2 to 4 inches and their length is from 3.2 to 6 inches.
- All the photos or cards (up to 24 at a time) are the same size.
- They are not printed on a dot matrix, laser, or ink jet printer or by a Polaroid® camera.
- They are not dusty, ripped, wrinkled, folded, stapled, clipped, carbon-coated, multi-part, or bound, and have no holes or other cut out areas.


Caution: Always use the document table to scan important, valuable, or one-of-a-kind photos or business cards. Dust, friction, or a feed jam may cause damage to the photo or business card if you load it in the feeder.

WARNING: Keep your hair, clothes, and hands away from the feeder's input tray. You may hurt yourself, damage the scanner, or both.


- 1** Lift up the output tray slightly and hold it up.

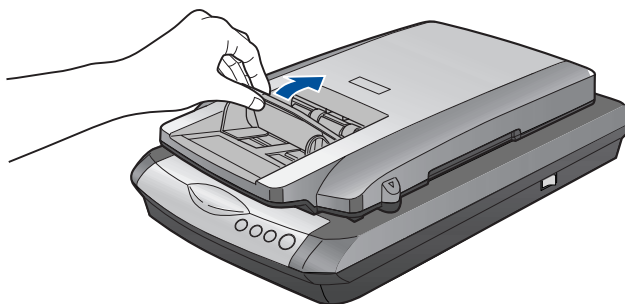

- 2** Load up to 24 business cards or photos into the feeder—**FACE DOWN** and short edge first—as far as they go. Place landscape-oriented business cards and photos with the top edge facing left. Place portrait-oriented business cards and photos top edge first.

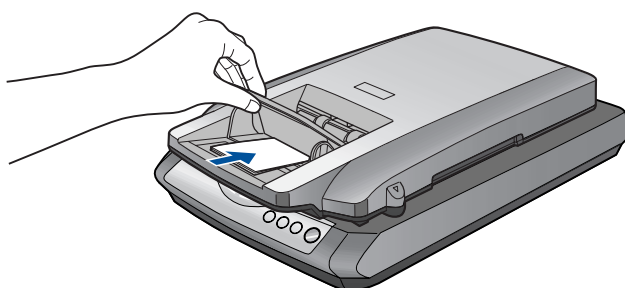

- 3** Lower the output tray and slide the guides so they are against the sides of your business cards or photos.

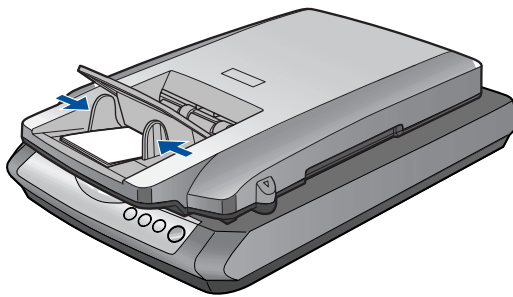


Note: If your business cards or photos are narrower than the guides, lift up the output tray, slide them against the left guide, and lower the output tray again.


5 Scan Cards or Photos

Scanning Business Cards

- 1** Double-click the **Presto! BizCard 4.1** icon on your desktop. You see a window like this:

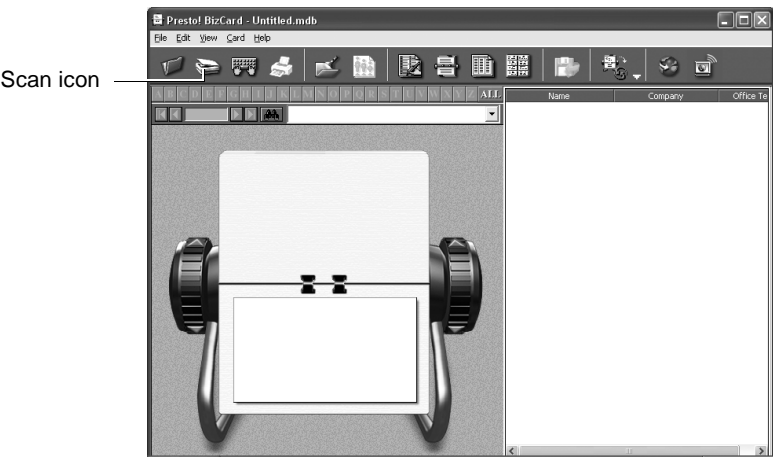


Note: On a Macintosh, you need to set up your scanning preferences. Click **File > Preferences**, then click the **Quick Scan** option to turn it on. Click **OK** and continue with step 2.

- 2** Double-click the  scan icon on the BizCard window.

The feeder loads the first business card, previews it, scans it, ejects it, and loads the next card. This process repeats for all the loaded cards.

BizCard then reads the business card images and converts them into editable text. It displays the results in a BizCard window like this:

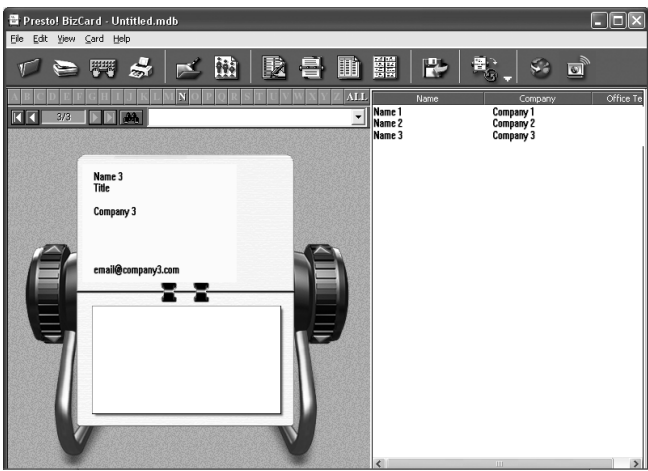


You may need to edit the recognized text, depending on the business card you're scanning. See the BizCard Help utility or the on-screen BizCard *User's Guide* for instructions.


Note: Double-click the **Perf 2480_2580 Reference Guide** icon on your desktop for additional information on your Multi Photo and Business Card Feeder and your scanner software.

Scanning Photos

- 1 Double-click the **EPSON Smart Panel** icon on your desktop. You see a window like this:

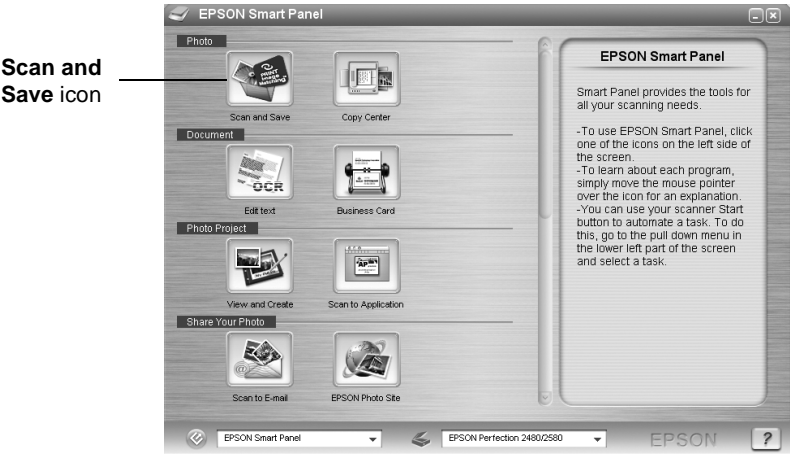


- 2 Double-click the **Scan and Save** icon. You see a file saving window like this:

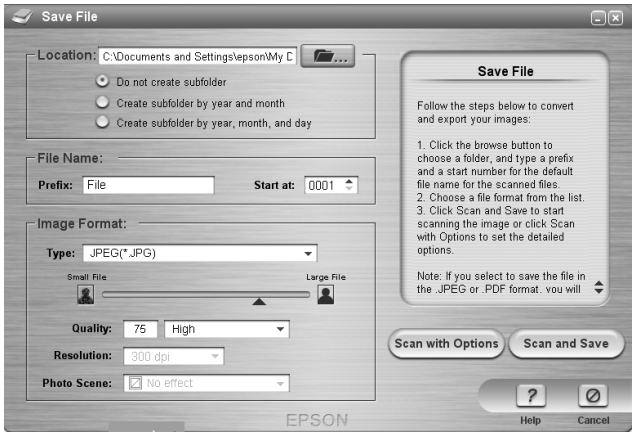

- 3 Select a location for your scanned photos, a file name prefix, and a file type. When you're finished, click the **Scan and Save** button.

The feeder loads the first photo, previews it, scans it, ejects it, and loads the next photo. This process repeats for all the loaded photos.

Your photos are saved in the location you specified and then opened in ArcSoft® PhotolImpression.™ You see a window like this:

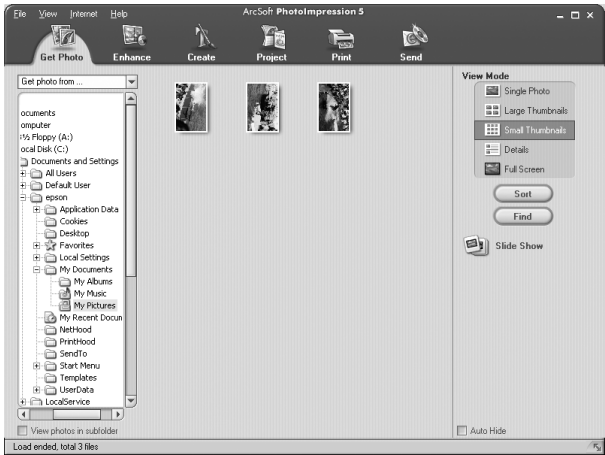

To modify your photos, create projects, or print your photos, see the PhotolImpression Help utility.

Note: Double-click the **Perf 2480_2580 Reference Guide** icon on your desktop for additional information on your Multi Photo and Business Card Feeder and your scanner software.